

PANDUIT PRINTER CLEANING INSTRUCTIONS

Utilize the following cleaning guidelines to maximize printer performance and operating life. Cleaning should be performed regularly, as described below for each printer, or when any irregular printing results occur.

Cleaning

⚠ CAUTION

Turn off the printer and remove the batteries before cleaning. If the AC adapter is connected, disconnect the AC adapter cable from the printer.


⚠ CAUTION EXTERIOR CLEANING

Never use chemicals or solvents such as benzine, thinner, or alcohol, or use a chemical duster.


When the exterior is dirty: Wipe the dirt off with a soft cloth. If it is very dirty, use a cloth wrung out of water.

When the printhead is dirty: If the print becomes faint or some parts are missing, there may be some dirt on the printhead. Prior to cleaning remove cassette or ribbon depending on what your printer is equipped with. Clean the printhead with a swab provided in PTR-CLN or LS8-CLN kit. For TDP printers clean the Platen roller when changing to a new label roll. ****Ensure printhead is completely dry prior to printing****


MP75/MP100/MP200/MP200-KIT/MP300 Diagrams

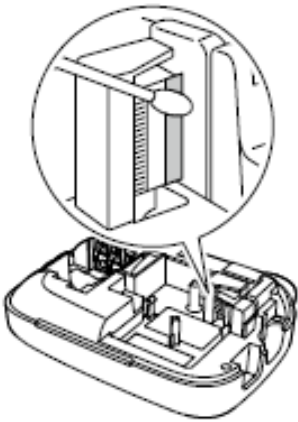

MP75

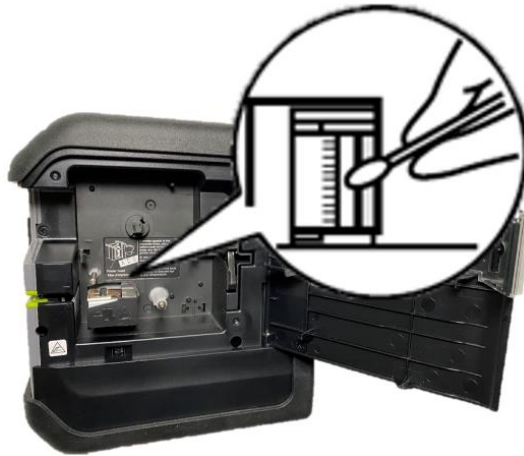


MP100

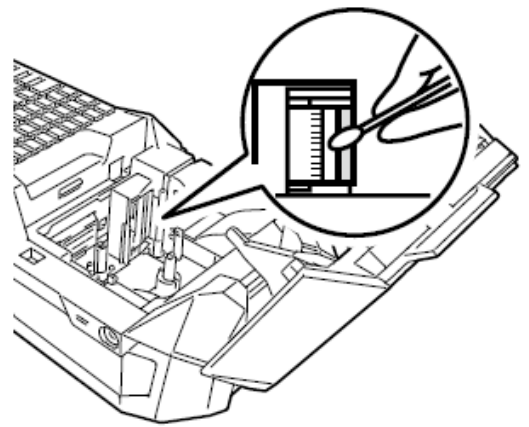


MP200/MP200-KIT/MP300


LS8E/LS8EQ/TDP43ME/TDP43(HE/T)/TDP46(HE/T) Diagrams

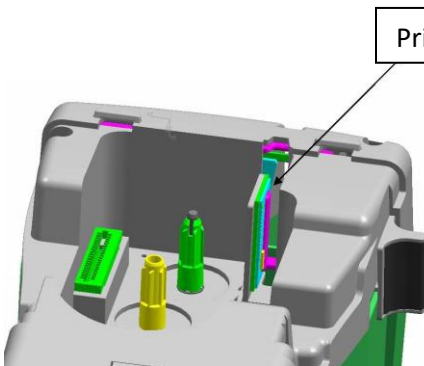

LS8E/LS8EQ

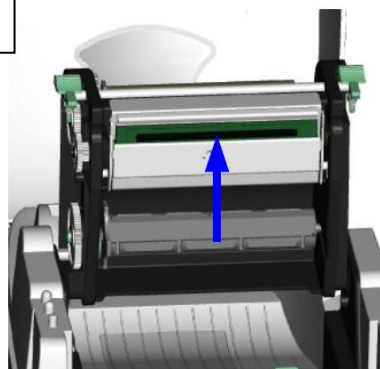

TDP43ME

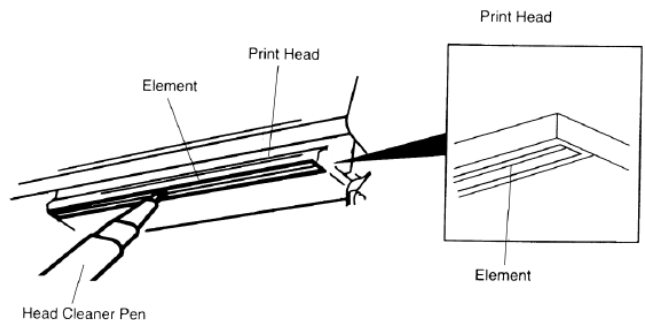

TDP43(HE/T)/TDP46(HE/T)