



SmartZone G5 PDU

Product Safety Warnings

Use only in dry locations. Indoor use only.

Utiliser uniquement dans des emplacements secs



The installer must connect the power distribution unit to an electrical supply that has a protective earth conductor.

For pluggable equipment, the socket outlet shall be installed near the equipment and shall be easily accessible.

For permanently connected equipment, a readily accessible disconnect device shall be incorporated external to the equipment.



Rack PDUs must be protected by a branch circuit protective device rated at the maximum rating of the product specified on the product rating label.

To avoid risk of overload, do not plug additional multiple outlet power distribution devices into the rack PDU socket outlets.

Complete Warranty & Compliance information can be found at www.panduit.com
Customer Service: cs@panduit.com or 800.777.3300
Technical Support: techsupport@panduit.com or 866.405.6654

IMPORTANT: See Installation Instructions Before Connecting to the Supply. Panduit recommends reviewing the Installation manual before installing the PDU. For Intelligent PDUs, Panduit recommends updating to the latest firmware available during the installation phase. Please see the G5 User Manual for firmware update instructions.

The G5 Installation Manual, G5 User Manual, and the latest Firmware version are all available at Panduit.com – Support – Download Center – Power Distribution Units.

